


Alaterre Furniture

 
 
Shaker Cottage End Table

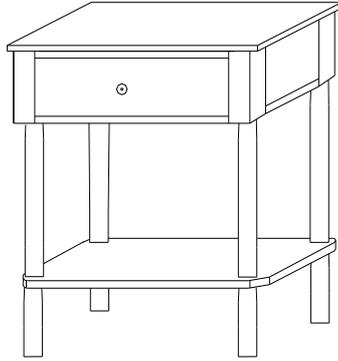

Thank you for purchasing our Shaker Cottage End Table. Assembly of this product requires a screwdriver. **We have found it helpful to have a second person present in at least one step of the assembly.**

End Table Assembly Instructions

Lay out all parts on a "non-abrasive" surface to avoid scratching furniture.

NO.	Drawing	Description	Qty.
A		Top Unit	1
B		Shelf	1
C		Posts	4
D		Feet	4
E		Drawer Knob	1

PARTS

Step 1


Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when first assembling this product.

Step 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non abrasive surface (like the carton or carpet) to prevent damage to the finish.

Step 3

Lay Top Unit (A) upside down and screw on Posts (C) to underside of Top until tight.

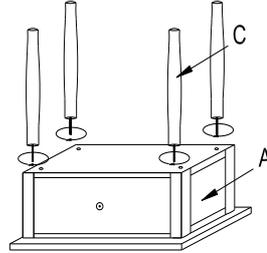


Step 4

Lay Shelf (B) over Posts (C).

Step 5

Screw on Feet (D) through shelf (B) into Leg (C) and tighten. Note: feet have adjustable levelers on bottom to make table level.

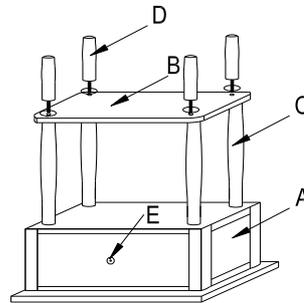

Step 6

Screw on Knob (E) to Drawer Front.

CARE

Clean with mild soap and wipe dry.

REPLACEMENT PARTS:

For best service, to order replacement parts go to www.alaterrefurniture.com. Use the order form on the web site to order your replacement parts. **Thank You!**